

—Standard Valves—

4050-BB Valve

-BD Valve

-BG Valve

GAS FILLED CATHODE RAY TUBE TYPE 4050-BB, 4050-BD, 4050-BG

Characteristics.

Filament voltage drop 0.75 volts

Filament current 0.7 to 1.1 amps.

Anode voltage 300 to 2,000 volts

Normal anode voltage 350 volts

Capacity between either
pair of deflecting plates
including the socket 5.5 μF .
(approx.)

Capacity of any single
plate to the anode
including the socket 7—8 μF .

Conductance of each pair of
deflecting plates 1 μmho
(approx.)


Shield voltage (from a
potentiometer) 0—50 volts

Sensitivity
(approx.) $\frac{440 \text{ mm. per}}{\text{V volt}}$

4050-BB has screen giving blue spot for
photographic work.

4050-BD has screen giving long afterglow of
10—15 seconds in the dark.

4050-BG has screen giving green spot for
visual work.

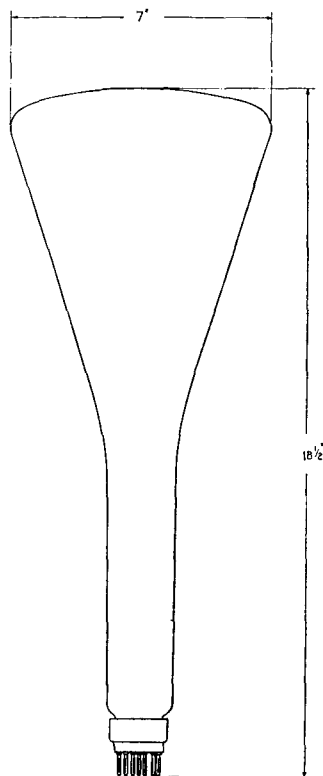

Dimensions.

Length 18 $\frac{1}{2}$ " (46 cms.)

Maximum diameter 7" (18 cms.)

Net weight 2.1 lbs. (940 gms.)

Base.


Standard British 9-pin.

4050-BB Valve
-BD Valve
-BG Valve

—Standard Valves—

Connections to Pins.

- Pin 1—deflecting plate PY2.
- Pin 2—deflecting plate PX2.
- Pin 3—not used.
- Pin 4—filament.
- Pin 5—filament.
- Pin 6—shield.
- Pin 7—deflecting plate PX1.
- Pin 8—deflecting plate PY1.
- Pin 9—anode.

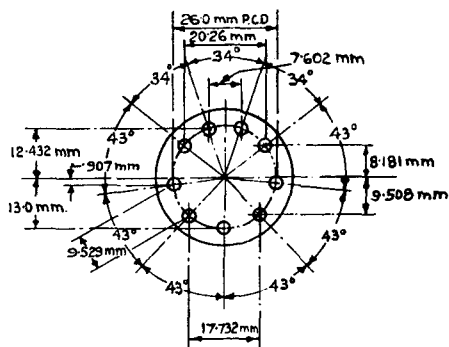

The pins are numbered in a clockwise direction looking at the valve from underneath ; the arrow points between pin 4 and pin 5.

The PX plates produce horizontal deflection when the tube is mounted with pins 4 and 5 at the bottom.

Associated Apparatus.

A large range of apparatus is made for use with the Cathode Ray Oscillograph. The most important units are the 74300 Type Tube Unit, 74300 Type Mains Unit and the 74300 Type Linear Time Base Unit. The 74310 Cathode Ray Oscillograph Equipment is a complete portable equipment incorporating this tube. For further particulars refer to the Standard Transmission Testing Apparatus Catalogue.

Operation.

A 2,000 ohm protective resistance should be included in the shield circuit as well as in the anode circuit.

PRINTED IN
ENGLAND