



5794

5794


FIXED-TUNED OSCILLATOR TRIODE**"PENCIL TYPE" WITH INTEGRAL RESONATORS***For radiosonde service at 1680 Mc**The 5794 is the same as the 6562 except for the following items:***Mechanical:**

Dimensions See Dimensional Outline

Terminal Connections (See Dimensional Outline):

H - Heater

K - Cathode

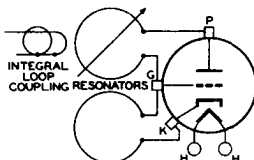

G - Grid

P - Plate

OPERATING CONSIDERATIONS

The *flexible heater leads* of the 5794 are usually soldered to the circuit elements. Soldering of these connections should not be made closer than 3/4" from the end of the tube. If this precaution is not followed, the heat of the soldering operation may crack the glass seals of the leads and damage the tube. Under no circumstances should any of the electrodes be soldered to the circuit elements. Connections to the electrodes should be made by spring contact only.

The 5794 should be supported by a suitable clamp around the metal shell either above or below the frequency-adjustment screw. It is essential, however, that the pressure exerted on the shell by the clamp be held to a minimum because excessive pressure can distort the resonators and result in a change of frequency.

The *plate and cathode connections* should have flexible leads which will accommodate variations in the relative positions of the plate and cathode terminals in individual tubes.


The 5794 may be mechanically tuned by adjustment of the frequency-adjustment screw located on the metal shell of the tube. A clockwise rotation of the frequency-adjustment screw will decrease the frequency, while a counter-clockwise rotation will increase the frequency. The range of adjustment provided by the screw is ± 12 megacycles.

← Indicates a change.



5794

FIXED-TUNED OSCILLATOR TRIODE

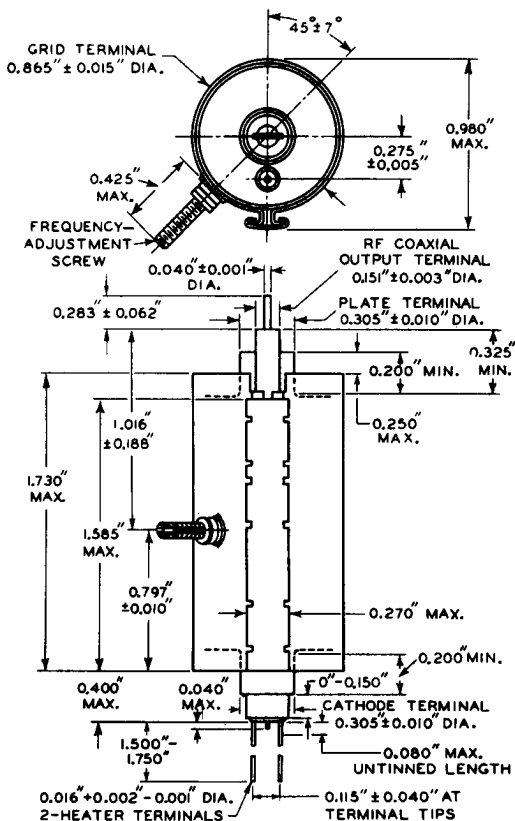

92CM-7140R4