

CHARACTERISTICS

GENERAL DATA

Focusing Method	.	.	.	.	.	.	.	.	.	.	Electrostatic
Deflection Method	.	.	.	.	.	.	.	.	.	.	Electrostatic
Phosphors	.	.	.	.	.	.	.	.	.	.	Aluminized
Types*	Fluorescence					Phosphorescence					Persistence
5BGP1	Green										Medium
5BGP2	Blue-Green					Green					Long
5BGP5	Blue										Very Short
5BGP7	Blue-White					Yellow					Long
5BGP11	Blue										Short
5BGP15	Blue-Green										Extremely Short
Faceplate	.	.	.	.	.	.	.	.	.	.	Clear

*In addition to the types shown, the 5BGP- can be supplied with several other screen phosphors.

ELECTRICAL DATA


Heater Voltage	6.3 Volts
Heater Current	$0.6 \pm 10\%$ Amperes
Direct Interelectrode Capacitances (approx.)	
Cathode to All Other Electrodes	$4.8 \mu\mu f$
Grid No. 1 to All Other Electrodes	$6.7 \mu\mu f$
D1 to D2	$1.8 \mu\mu f$
D3 to D4	$1.3 \mu\mu f$
D1 to All Other Electrodes Except D2	$3.3 \mu\mu f$
D2 to All Other Electrodes Except D1	$3.3 \mu\mu f$
D3 to All Other Electrodes Except D4	$2.7 \mu\mu f$
D4 to All Other Electrodes Except D3	$2.7 \mu\mu f$
Post Accelerator Helix Resistance	200 to 600 Megohms

MECHANICAL DATA

Minimum Useful Screen Diameter	$4\frac{1}{2}$ Inches
Anode No. 3 Contact (Recessed Small Cavity Cap)	J1-21
Bulb (Modified)	J42K
Base (Medium Shell Diheptal 12-Pin)	B12-37
Basing	14AF
Base Alignment	
D3-D4 trace aligns with Pin No. 1	± 10 Degrees
Positive Voltage on D1 deflects beam approx. toward Pin No. 4	
Positive Voltage on D3 deflects beam approx. toward Pin No. 1	
Angle Between traces D1-D2 and D3-D4	90 ± 1 Degrees
Bulb Contact Alignment	
J1-21 contact aligns with D1-D2 trace	± 10 Degrees
J1-21 contact on same side as Pin No. 4	

QUICK REFERENCE DATA

5" Direct Viewed
Flat Faceplate
Round Glass Type
Electrostatic Deflection
Electrostatic Focus
Helical Resistor Post Deflection
Acceleration
High Deflection Sensitivity
High Deflection Accuracy
Aluminized Screen

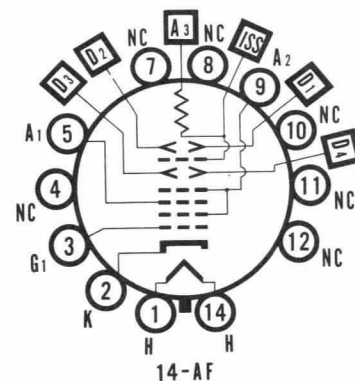

MAXIMUM RATINGS (Absolute Maximum Values)

Anode No. 2 Input	6 Watts	Max.
Anode No. 3 Voltage	13,200 Volts	dc
Isolation Shield Voltage	2300 Volts	dc
Anode No. 2 Voltage	2200 Volts	dc
Ratio of Anode No. 3 Voltage to Anode No. 2 Voltage	6 : 1	Maximum
Anode No. 1 (Focus Electrode) Voltage	880 Volts	dc
Grid No. 1 Voltage		
Negative Bias Value	220 Volts	dc
Positive Bias Value	0 Volts	dc
Positive Peak Plate	2 Volts	
Peak Heater-Cathode Voltage		
Heater Negative with Respect to Cathode		
During Warm-up Period Not to Exceed 15 Seconds	200 Volts	
After Equipment Warm-up Period	140 Volts	
Heater Positive with Respect to Cathode	140 Volts	
Peak Voltage Between Anode No. 2 and Any		
Deflection Plate	550 Volts	

TYPICAL OPERATING CONDITIONS

Anode No. 3 Voltage ¹	10,000 Volts	dc
Isolation Shield Voltage ²	1575 to 1700 Volts	dc
Anode No. 2 Voltage ³	1670 Volts	dc
Anode No. 1 Voltage for Focus	180 to 590 Volts	dc
Grid No. 1 Voltage Required for Cutoff ⁴	-50 to -80 Volts	dc
Deflection Factor ⁵		
Deflection Plates 1-2	70 to 86 Volts	dc/Inch
Deflection Plates 3-4	28.4 to 34.8 Volts	dc/Inch
Pattern Distortion at 100% Useful Scan ⁶	1%	Maximum
Undelected Spot Position ⁷ (Deviation from Center)	5 MM.	Max.
Useful Scan		
D1-D2	10 cm.	
D3-D4	6 cm.	

CIRCUIT VALUES

Grid No. 1 Circuit Resistance	1.5 Megohms	Max.
-------------------------------	-------------	------

NOTES:

1. It is recommended that the Anode No. 3 voltage be no less than 6000 volts for suitable light output.
2. The isolation shield and the lower end of the Post Accelerator helix are connected together within the tube. With the proper potential on this electrode combination, barrel and pin-cushion distortions are minimized.
3. Under the typical operating conditions listed the Anode No. 2 voltage is made variable from 1575 volts to 1850 volts to provide for astigmatism control. In order to maintain proper astigmatism adjustment as total cathode current is varied, it is recommended that the resistance in the Anode No. 2 circuit be limited to 12,500 ohms.

NOTES: (Cont'd)

4. Visual extinction of undeflected focused spot.
5. If use is made of the full deflection capabilities of the tube, the deflection plates will intercept part of the electron beam near the edge of the scan; hence a low impedance deflection plate drive is desirable.
6. With a 6 x 10 cm rectangular raster centered on the face of the tube, the raster edges will not deviate from straight parallel lines by more than 1 mm total on the left and right edges, nor by more than 0.5 mm total at the top and bottom.
7. Connect deflection plates to Anode No. 2.

WARNING:

X-ray radiation shielding may be necessary to protect against possible danger of personal injury from prolonged exposure at close range if this tube is operated at higher than the manufacturer's Maximum Rated Anode Voltage or 16,000 volts, whichever is less.

