


CMA 1257 CARCINOTRON

The CMA.1257 is a rugged, compact electronically tunable, crossfield, backward wave oscillator. Its light weight makes it suitable for airborne equipments. Sturdy metal-ceramic construction insures reliable performance in spite of severe environmental conditions.

This M type carcinotron provides an output of at least 150 W over the frequency range of 7.2 to 8.7 GHz. The tube tunes over the entire frequency range by changing the line or sole voltage.

It can be amplitude modulated through its anode. Frequency modulation can be obtained by line or sole voltage variations.

The CMA.1257 uses integral permanent magnet focusing. Liquid cooling insures operation in a wide temperature range.

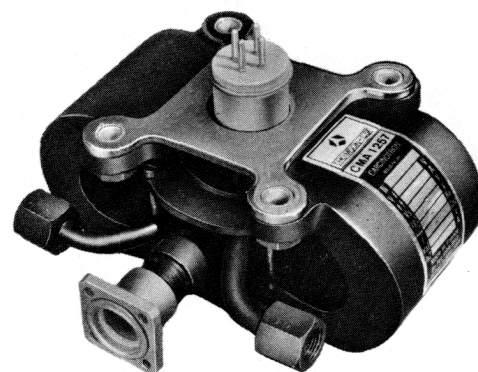

GENERAL CHARACTERISTICS

Electrical (1)

	min.	max.	
Heater voltage	1.5	6.3	V
Heater current	150	3.0	A
Output power	7.2	8.7	W
Frequency range			GHz
Interelectrode capacitances :			
Sole to all other electrodes	—	45	pF
Anode to all other electrodes	—	15	pF
Line to all other electrodes	—	45	pF
Sole voltage	-0.7	-1.8	kV
Sole current	-30	+10	mA
Grid voltage	-0.1	-0.7	kV
Grid current	-3	+3	mA
Anode voltage	0.7	2.0	kV
Anode current	-3	+3	mA
Line voltage	1.9	5.0	kV
Line current		300	mA

Mechanical

Operating position	any
Dimensions	see drawing
Weight	2.5 kg
RF output connector	UG 141/U

(1) - All voltages are referred to the cathode.


THOMSON-CSF
 GROUPEMENT TUBES ELECTRONIQUES

COOLING

WATER

Water flow	min.	2	l/mn
Pressure drop (1)	max.	0.1	bar
Coolant temperature . . .	max.	80	°C
Absolute inlet pressure .	max.	6	bar

COOLANOL 35

Liquid flow	min.	4	l/mn
Pressure drop (1)	max.	0.6	bar
Coolant temperature . . .	max.	80	°C
Absolute inlet pressure .	max.	6	bar

ABSOLUTE RATINGS

(non simultaneous values)

	min.	max.		min.	max.	
Warm-up time	3	—	mn	Sole voltage (3)	—200	+200 V
Heater voltage	6.0	6.6	V	Grid voltage (3)	—100	+100 V
Heater surge current . . .	—	6	A	Anode voltage (3)	—	+200 V
Load VSWR (2)	—	3 : 1		Line voltage	—	5.2 kV
Ambient temperature . . .	—40	+110	°C	Line current	—	320 mA
Vibration : 5 to 15 Hz ± 1 mm				Acceleration	—	15 g
15 to 500 Hz 2 g						

TYPICAL OPERATION

Heater voltage	6.3	V	Oscillating frequency :	7.2	8.7	GHz
Heater current	1.7	A				
Sole voltage	—1.2	kV	Anode voltage	1.36	1.34	kV
Grid voltage	—0.4	kV	Line voltage	2.70	4.26	kV
Grid current	0	mA	Sole current	—2	+14	mA
Line current	300	mA	Output power	205	235	W

OPERATING INSTRUCTIONS

Application of voltages

Before applying any voltages to the tube, check the coolant flow.

Apply the heater voltage and allow at least three minutes for the cathode to warm-up.

Apply grid and sole voltages.

Apply line voltage. The minimum value of the line voltage given on the tube label is for operating at the lower frequency ; when starting the tube, the voltage applied should be slightly higher.

Apply reduced anode voltage. Increase the voltage slowly and simultaneously check the line voltage, which should not decrease.

Adjust the voltages for each particular operation.

Apply modulation voltages.

Removal of voltages

First remove the modulation voltages.

Remove anode voltage.

Remove line voltage.

Remove sole, grid and heater voltages.

Turn off coolant supply to the tube.

Caution

Minimum distance of 15 cm should be kept between the tube and all other magnetic materials.


(1) - 1 bar = approximately 15 psi.

(2) - The tube may require a load isolator at load VSWR exceeding 1.5 : 1 to maintain the tube performances.


(3) - These minimum and maximum ratings are the allowable deviation from the nominal value given for each tube.



Characteristic curves

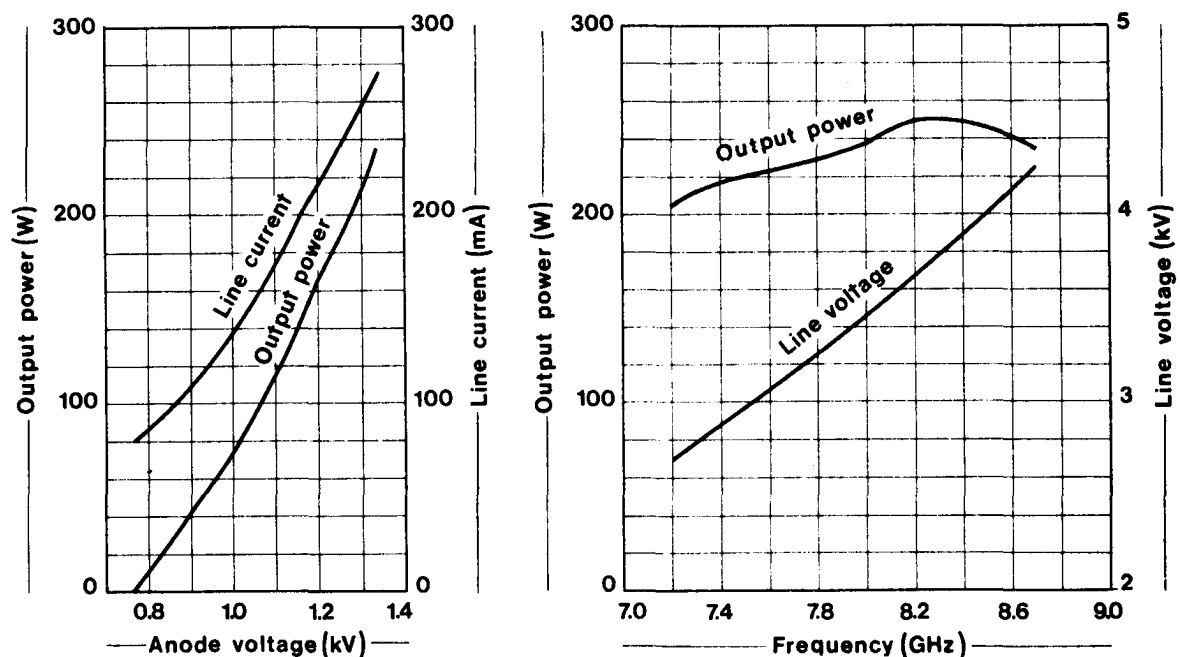


Supply diagram

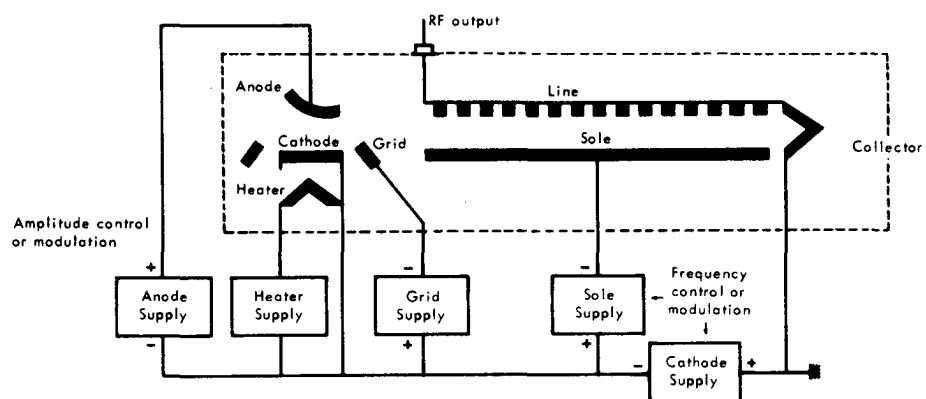




THOMSON-CSF
GROUPEMENT TUBES ELECTRONIQUES

OUTLINE DRAWING

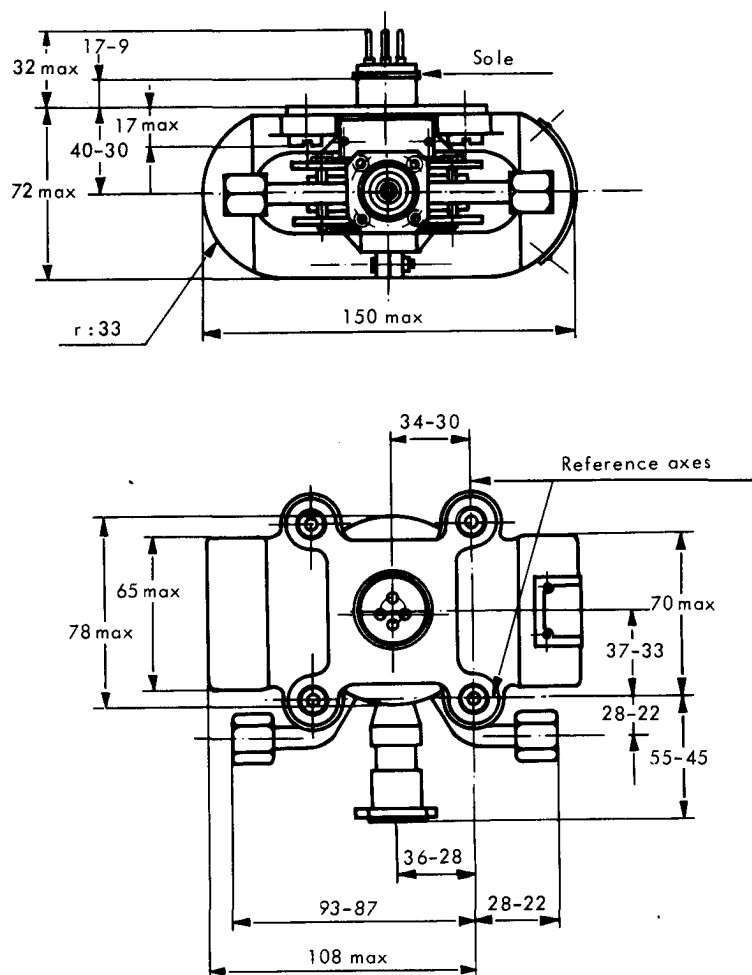


Pin arrangement

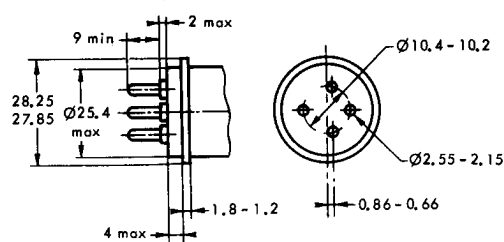


The pin position with respect to the tube axes is determined within 10°

Maximum base eccentricity with respect to the sole connection: 0,3 mm.

Water connection

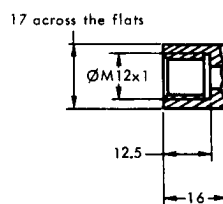

Mounting flange

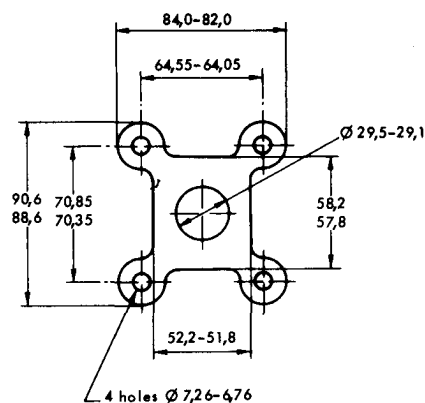

Dimensions in mm

