
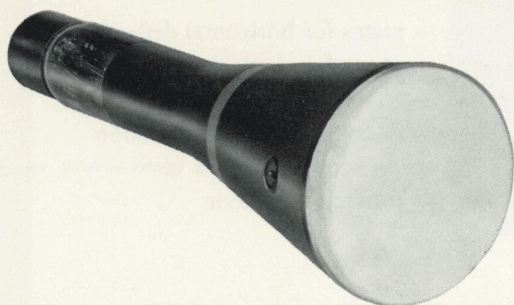


PHILIPS

CATHODE-RAY TUBES

for measuring equipment

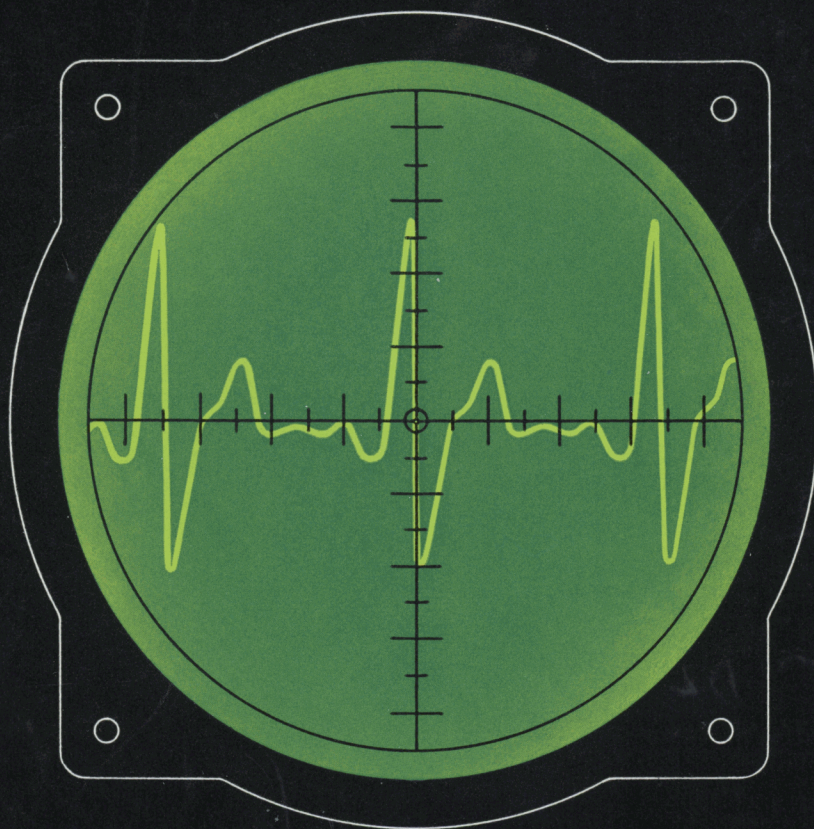

PHILIPS ELECTRON TUBE DIVISION

DG 10-6

DB 10-6

DP 10-6

DR 10-6

PHILIPS

GENERAL PURPOSE CATHODE RAY TUBE

DG 10-6


DB 10-6

DP 10-6

DR 10-6

- *High-tension post-acceleration*
- *A brilliant spot*
- *Symmetrical deflection*
- *Good linearity*
- *Four screen types*

The DG 10-6 is a general-purpose Cathode-Ray Oscilloscope Tube, with a faceplate of 10 cm (4'') diameter, featuring electrostatic double symmetrical deflection and extra high tension post-acceleration

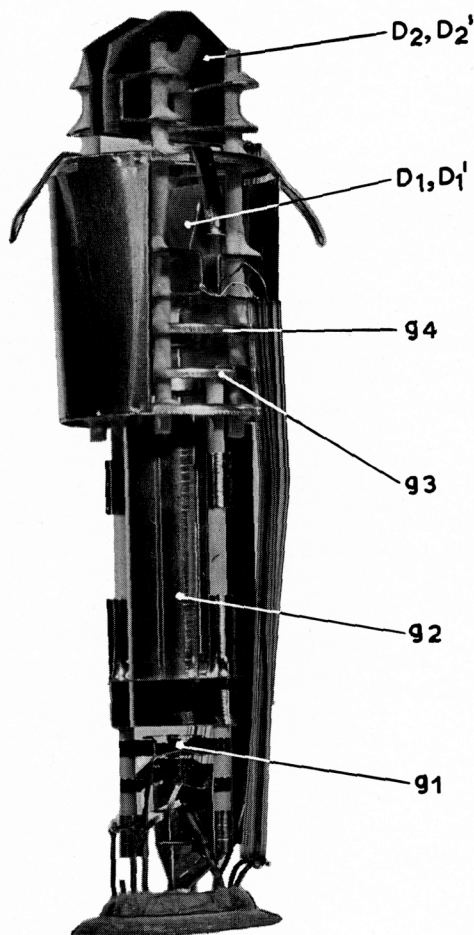

Electron gun of the Cathode-Ray Tube DG 10-6

- D_2D_2' — plates for horizontal deflection
 D_1D_1' — plates for vertical deflection
 g_1 — control grid
 g_2g_4 — electrodes for pre-deflection acceleration
 g_3 — focusing electrode



The Philips Cathode-Ray Tube DG 10-6, has the following main features

Thanks to the high-grade phosphor screen and extra high-tension post acceleration, high brilliancy at small spot dimensions is achieved.

Symmetrical deflection, providing for low interelectrode capacity and good linearity

For various applications different screen types available

- G A green screen for oscilloscopy and recording of medium and high-frequency phenomena.
- B A blue screen for photographic recording of non-recurrent high-speed phenomena.
- P A double-layer screen with bluish fluorescence for oscilloscopy and recording of low-frequency and low-speed non-recurrent phenomena.
- R A greenish-yellow screen for oscilloscopy and recording of low- and medium-frequency signals*)

As a result of these electrical and mechanical characteristics, this tube is particularly suitable for measuring equipment.

ELECTRICAL DATA

Screen

Tube type	Fluorescence (colour)	Persistence	
		Character	0.1 % of max. brightness after
DG 10-6	green	medium	50 millise.
DB 10-6	blue	short	20 millise.
DP 10-6	blue (afterglow greenish-yellow)	very long	80 sec.
DR 10-6	greenish-yellow	long	20 sec.

Heating indirect by A.C. or D.C.

Heater voltage $V_f = 6.3 \text{ V}$

Heater current $I_f = 0.3 \text{ A}$

Deflection double electrostatic D_1D_1' symmetric
 D_2D_2' symmetric

Focusing electrostatic

Line width at $V_{g5} = 2000 \text{ V}$


$V_{(g2 + g4)} = 2000 \text{ V}$ 0.4 mm **)

$I_l = 0.5 \text{ } \mu\text{A}$

$V_{g5} = 4000 \text{ V}$

$V_{(g2 + g4)} = 2000 \text{ V}$ 0.3 mm **)


$I_l = 0.5 \text{ } \mu\text{A}$

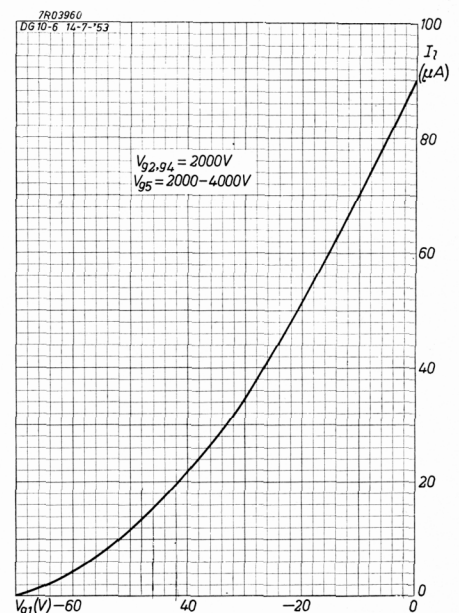

Screen current as a function of negative grid cut-off voltage

*) Detailed information on all phosphors is given in a folder dealing with data and characteristics of Philips phosphors.

**) Measured on a circle of 50 mm diameter.

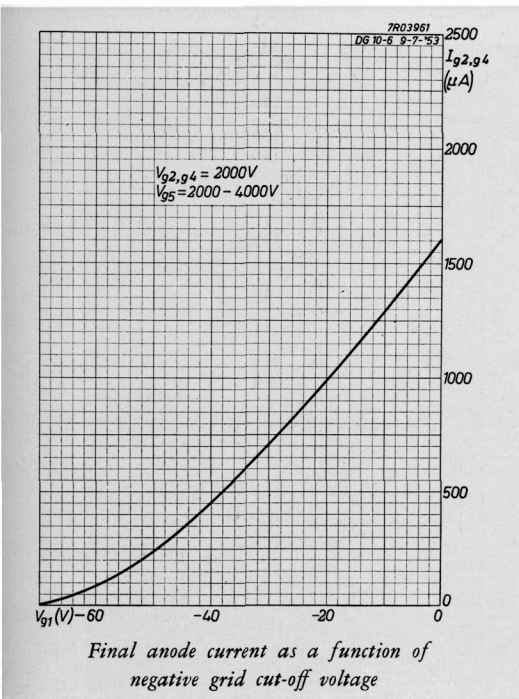

INTERELECTRODE CAPACITANCES		
Electrodes	Symbol	Value (pF)
D_1 to D_1'	$C_{D_1 D_1'}$	1.9
D_2 to D_2'	$C_{D_2 D_2'}$	2.5
D_1 to all	C_{D_1}	4.7
D_1' to all	$C_{D_1'}$	4.7
D_2 to all	C_{D_2}	5.5
D_2' to all	$C_{D_2'}$	5.5
Grid 1 to all	C_{g_1}	4.6
Cathode to all	C_k	6.0

Operating characteristics

		with post acceleration	without post acceleration
Grid No. 5 voltage	V_{g_5}	= 4000	2000 V
Grid No. 2 + No. 4 voltage*)	$V_{(g_2 + g_4)}$	= 2000	2000 V
Grid No. 3 voltage	V_{g_3}	= 400	720 V
Negative grid No. 1 voltage **)	$-V_{g_1}$	= 45	100 V
Deflection sensitivity	$D_1 D_1'$	= 0.25	0.31 0.32 0.38 mm/V
Deflection sensitivity	$D_2 D_2'$	= 0.19	0.25 0.24 0.30 mm/V

Limiting values (design center values)

Grid No. 5 voltage	V_{g_5}	= max. 5000 V
Grid No. 2 and grid No. 4 voltage	$V_{(g_2 + g_4)}$	= max. 2500 V
Ratio $V_{g_5}/V_{(g_2 + g_4)}$	$V_{g_5}/V_{(g_2 + g_4)}$	= max. 2
Grid No. 3 voltage	V_{g_3}	= max. 1000 V
Grid No. 1 voltage (negative value)	$-V_{g_1}$	= max. 150 V
Grid No. 1 voltage (positive value)	$+V_{g_1}$	= max. 0 V
Peak voltage on $D_1 D_1'$	$V_{D_1 D_1' p}$	= max. 450 V
Peak voltage on $D_2 D_2'$	$V_{D_2 D_2' p}$	= max. 450 V
Voltage between cathode and heater	V_{kf}	= max. 125 V
Screen dissipation	W_l	= max. 3 mW/cm ²
Grid No. 2 and Grid No. 4 dissipation	$W_{(g_2 + g_4)}$	= max. 4 W

Maximum circuit values

Deflection plate circuit resistance	R_D	= max. 5 MΩ
Grid No. 1 circuit resistance	R_{g_1}	= max. 1.5 MΩ

MECHANICAL DATA

Mounting position any


Dimensions	overall-length max. 341 mm (13 ²⁷ / ₆₄ "')
	screen diameter 10 cm (4"')

Anode contact B1.885.06.



*) Earthing of g_2 , g_4 is recommended.
**) For visual extinction of the focused spot.

G-screen

The green fluorescent G-screen provides high visual contrast under conditions of normal ambient illumination. It has medium persistence and can be used for visual observation of recurrent phenomena in the majority of applications.

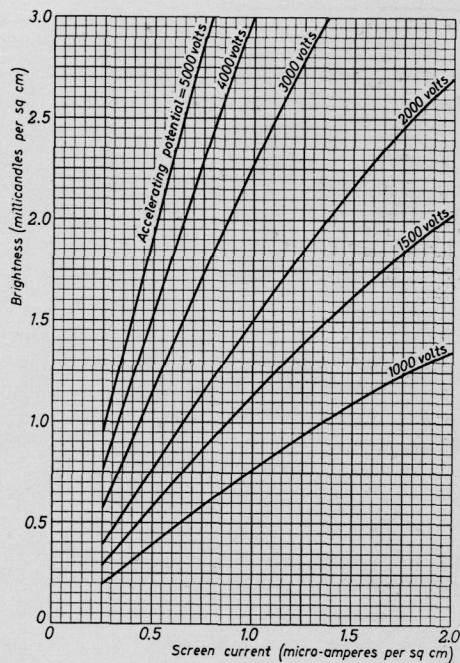


Relative spectral energy distribution of a G-screen

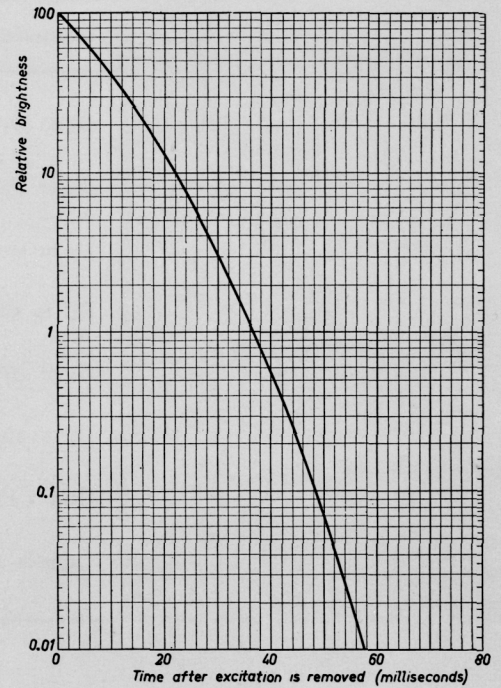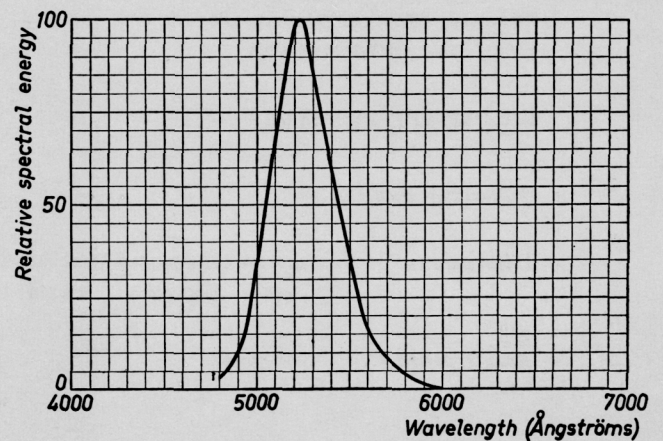


Persistence characteristic of a G-screen.


Brightness of a G-screen as a function of the screen current per square cm screen area, with the accelerating potential as a parameter.

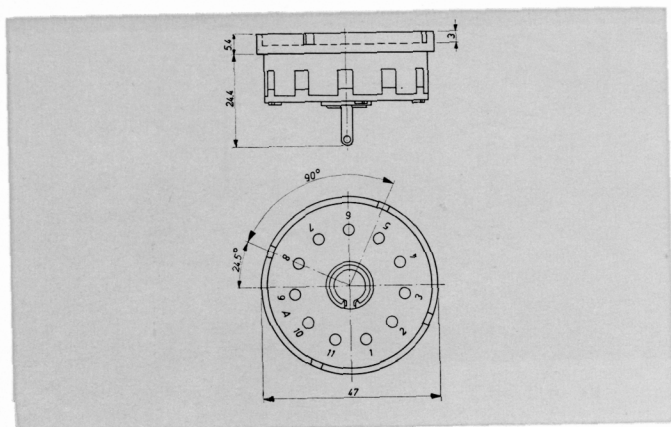


Base: Magnal

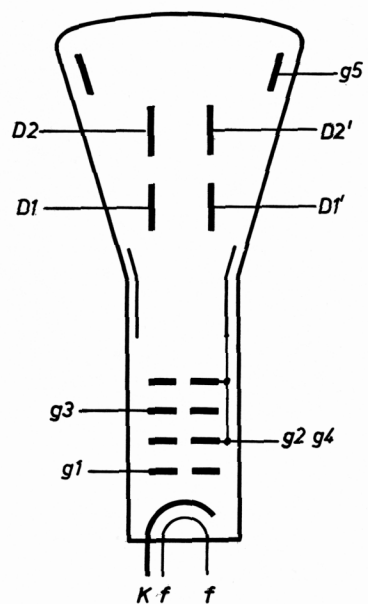


Electrode arrangement

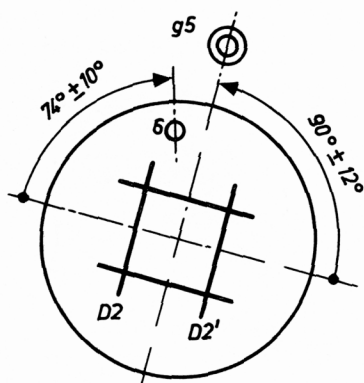

Position of the deflection plates

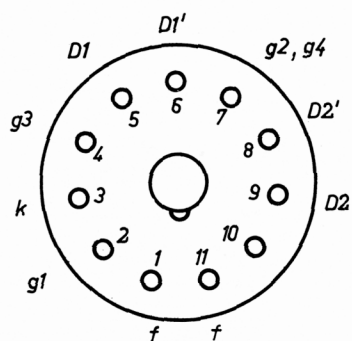

Base connections

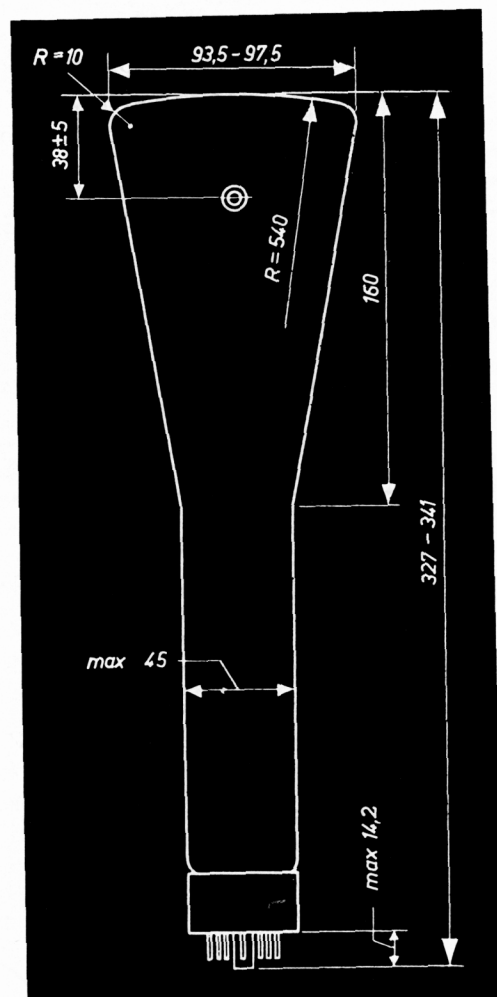

Outline drawing of the DG 10-6